

Funnel Flow Fan

Stir Fans

HIRED-HAND®

BEFORE INSTALLING FAN

READ ALL INSTRUCTIONS PRIOR TO INSTALLATION

- Inspect fan for damage in transit.
 Check for loose, missing, or damaged parts.
- 2. Do not operate fan until you are completely familiar with its operation.
- Disconnect power source before installing or servicing fan. Failure to disconnect power source can result in property damage, serious injury, or death.
- 2. When connected to an automatic controller, FAN MAY START AT ANY TIME.
- 3. IMPORTANT! Before Operating Fan, Inspect Fan For any Object That May Obstruct Blade Rotation.

MAINTENENCE

- 1. Read WARNING statements before proceeding.
- Blades, motor, and wire guards should be cleaned periodically to decrease vibration and ensure maximum fan life. Remove dirt with a dry brush or compressed air. DO NOT SPRAY MOTOR WITH WATER OR CLEANING FLUIDS.
- Fan performance may be greatly reduced by damaged or dirty shutter. Clean and inspect shutter periodically to ensure maximum fan performance.

WARRANTY

Your Funnel Flow fan has been manufactured with the finest materials and components available and is backed by a one year warranty against electrical and mechanical defects in material and workmanship. If this fan fails to operate during this period, return it prepaid to place of purchase for repair or replacement without charge at the manufacturer's option.

Damage by accident or abuse is not covered by this warranty.

This warranty gives you specific legal rights and you may have other rights that vary from state to state.



INSTALLATION

- 1. Attach fan by flange to wall.
- 2. Fan is provided with wire guards for your protection. National safety codes require that guards be installed if fan is installed within 7 feet of floor or in reach of personnel or livestock.

FAILURE TO GUARD MOVING PARTS MAY RESULT IN SERIOUS INJURY OR DEATH.

- 3. Connect Power Cord and Electrical Power
- 4. Unit is now ready for operation.

IMPORTANT: INSPECT FAN FOR ANY OBJECT THAT MAY OBSTRUCT BLADE ROTATION.

REPLACEMENT PARTS

 Part. No.
 Description

 3017-5018
 Motor 1/3 HP 1075 RPM

 6403-0121
 SS FF 24" PROP 3 BLADE

6403-5013 /PROP GS EF-24